

NAV&Power COMPUTER PANEL

(NL) Aansluiten van het Nav & Power Panel.

De drie aderige draad met de grijze mantel, aansluiten op het 220V (4A max) boordnet. De geel/groene draad is de aarddraad, aansluiten op de aardlekschakelaar.

De twee aderige draad, rood/zwart aansluiten op het 12/24 V (8A max) boordnet. De rode draad is de + (plus) en de zwarte draad is de - (min).

- Audio via 3,5 mm Jack stereo.
- USB via USB-A stekker.
- Com-poort via 9p sub-D stekker. Inclusief front kabel (NP-21).
- Externe monitor via 15p HD stekker.


(GB) How to connect your Nav & Power Panel.

The triple lead wire, is used to connect to the 220V (4A max) boardnet. The yellow/green wire is used to connect to ground.

The black and red wire is used to connect to the 12 / 24 V (8A max) boardnet. The red wire is the positive (+) lead and the black is the negative (-) lead.

- Audio by 3,5 mm Jack stereo.
- USB by USB-A connector.
- Com-port by 9p sub-D connector. Front cable included (NP-21).
- External monitor by 15p HD connector.



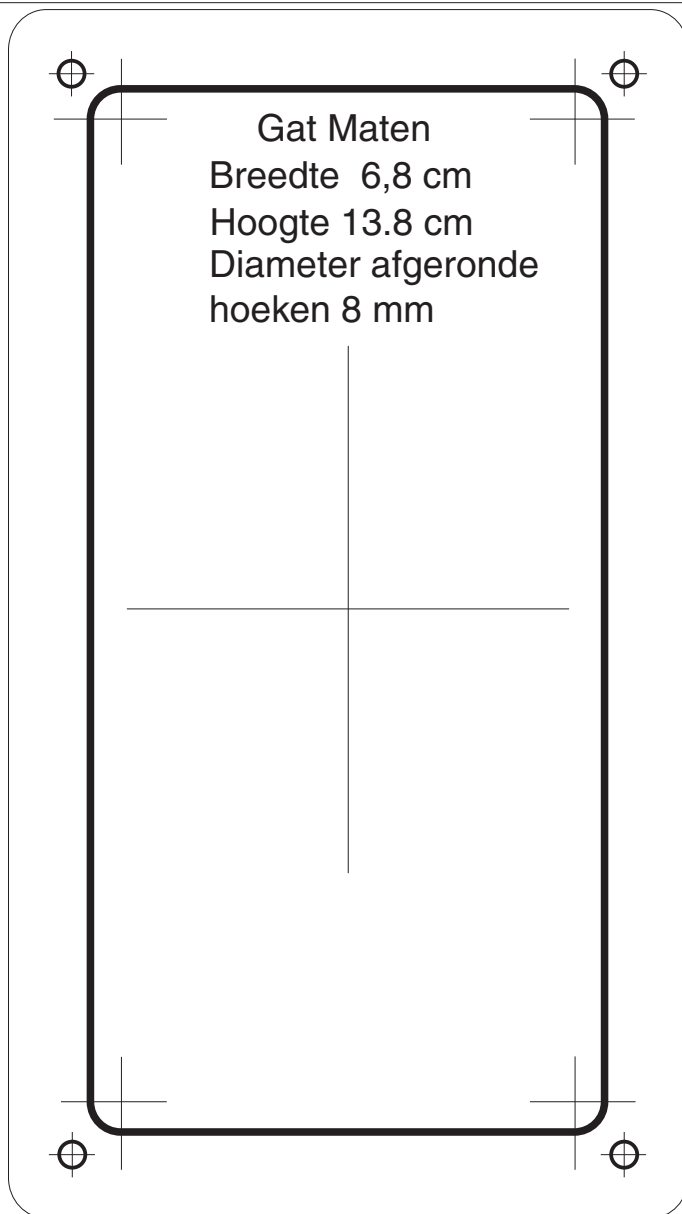

Afmetingen Paneel
Breedte 9 cm
Hoogte 16 cm